



Chemilizer Injector

Contents

Included in the package:

1. Water Motor with Chemical Line
2. Chemical Pump with Jaco Nut
3. Suction Hose with Filter and Spring Clip
4. Owners Manual
5. Mounting Screws (4) with Template

Introduction

Your Chemilizer Injector

Thank you for purchasing a Chemilizer injector. Hydro Systems Company is committed to manufacturing the highest quality product to fill your injection needs.

Water Motor Specifications

Water flow02 - 11GPM
Pressure	3 psi to 85 psi
Max. temp	100° F (38° C)
Pipe size	3/4" nht (national hose thread)
Ratio	SEE PUMP LABEL*
Size	11" height x 8 1/2" width
Weight	4.54 lbs. (5.48 lbs. box)

Ratios available:

Fixed Ratios	Adjustable Ratios
50:1	20:1 to 64:1
64:1	
100:1	50:1 to 164:1
128:1	
250:1	150:1 to 500:1

Operation & Maintenance Safety

NEVER install the injector below the chemical supply. The injector must always be installed above the chemical supply container.

NEVER leave the injector or water lines full of water during freezing temperatures. Visually inspect the injector and water system for leakage.

Before you back wash the filter, make sure you turn off valves B and C. When the backwash is complete, return them to the open position. If you fail to do this, water may drain from your unit and you may have to prime the pump.

Warning! Risk of Chemical Overdose

To reduce risk, follow proper installation methods and instructions. The point of chemical injection should be beyond all pumps, filters and heaters.

Caution! Plumbing

Unit installations must always adhere to your local plumbing codes and requirements. Check local plumbing codes for guidelines.

Notice:

Components of Chemilizer Injectors have been tested for tolerance to a wide variety of chemical compounds at common solution strengths. Chemilizer Injectors provide a means of delivery for chemicals in general. Hydro Systems does not suggest or recommend ways or procedures for using any chemical.

Hydro Systems Company is not responsible for injury incurred by the misuse or improper handling of chemicals.



Hydro Systems Technical Support For the latest updates or modifications, please check our website at:
1-800-543-7184 **www.hydrosystemsco.com**

M-F 8:30am -5pm

Installation

Mounting Template

In each box is a white envelope containing four screws. The envelope is marked for use as a template. Unit can be mounted to any stationary surface, or to a post. Tighten screws until the head is about 1/8" away from the surface. The brackets on the back of the unit will slide down between the screw head and the surface.

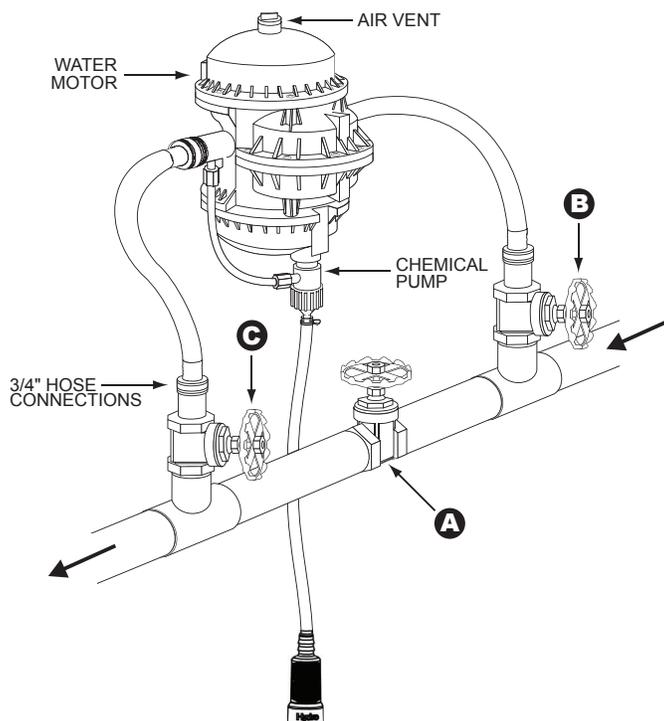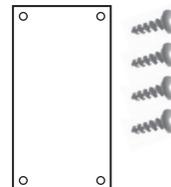



Starting the Unit

1. Be sure chemical pump is locked into the bottom of the water motor. (1/4 turn to the right)
2. Open valves **(B)** and **(C)**
3. Close valve **(A)**
4. Open air vent until all trapped air is released

Stopping the Unit

1. Open valve **(A)**, then close valves **(B)** and **(C)**

Alternate Mounting Below Pipe

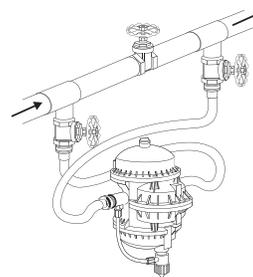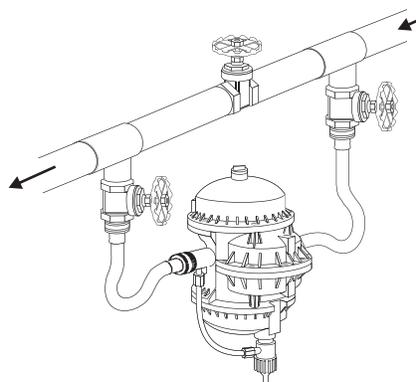


Note:

Do Not Hook Motor Up Backward

Water must flow through motor from right to left. If necessary, crisscross hoses to accommodate setup.

Injection Fitting

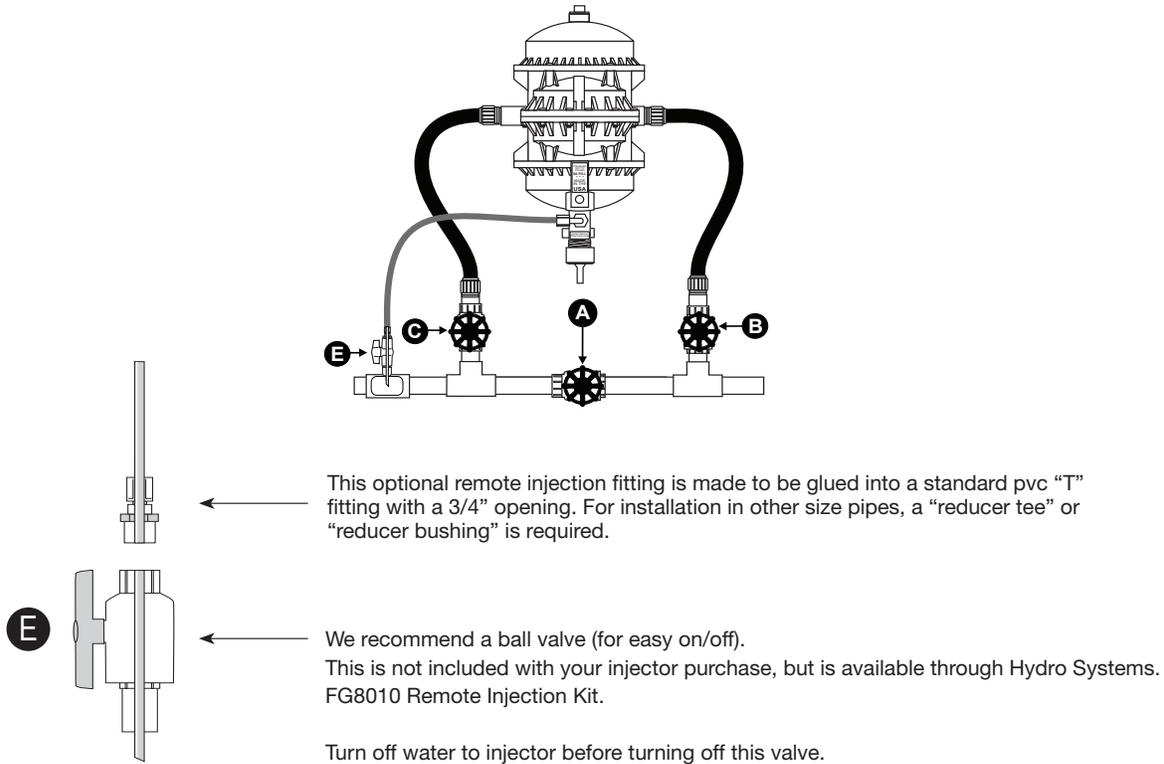

General Maintenance Tips

Water Motor

1. Do not let unit freeze.
2. Periodically clean or replace chemical hose (hose between pump & water motor) and connectors. Chemical buildup will cause the unit not to pump.
3. If chemical pump becomes hard to remove from bottom of water motor, clean inside of opening on bottom cap of water motor with tooth brush & white vinegar.


Chemical Pump

1. Clean pump after use by running clean water through the pump for 5 minutes, or by removing the pump and hand cleaning individual parts.

Other

1. Water is always a factor with the life of any injector. If you know you have problem water, an in-line filter before the injector is a wise investment.
2. Keep your stock solution bucket clean of foreign particles and trash.
3. Keep the suction hose filter off the bottom of the stock solution bucket, insoluble particles may cause clogging and accelerate wear.

Installing the Fixed Pump to the Water Motor

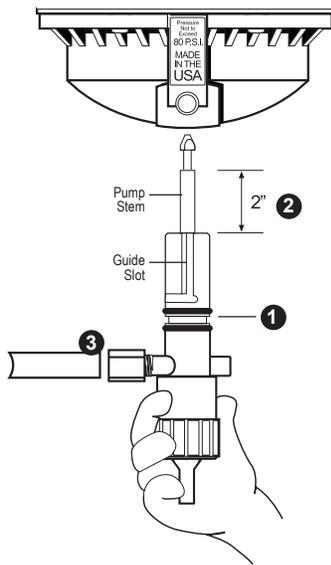

1. Lubricate “O” rings on pump housing with any biodegradable lubricant when pump is removed from motor.

NOTE: a light coating of lubricant is all that is required.


2. **Make sure the pump stem is pulled all the way out (about 2”).**

Push the pump up into the water motor, and turn 1/4 turn clockwise, port to front.


NOTE: the guide slot must be aligned to fit into the key on the inside of the water motor.

3. After installing pump into bottom of water motor - loosen Jaco nut on pump and insert hose into fitting. Re-tighten Jaco nut.


Fixed Pump Parts

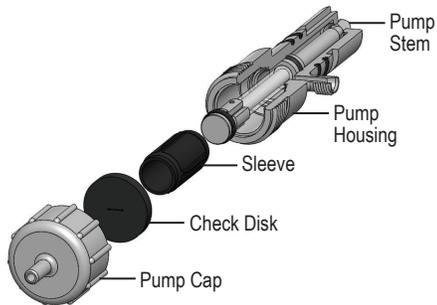

Pump Rebuild Kit

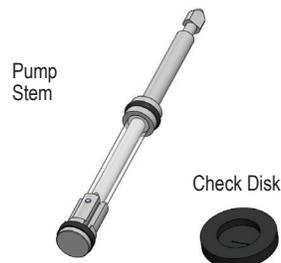


Removing the Fixed Pump from the Water Motor

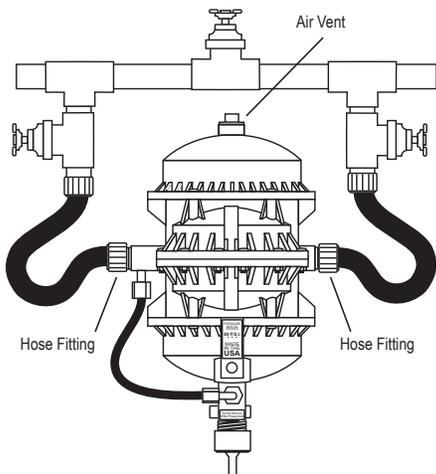

1. Make sure the water is turned off, and water pressure in the water motor is released - this is done by loosening the **Air Vent** (pressure relief valve) on the top of the water motor and turning off the water at both gate valves.

NOTE: Do Not Remove Air Vent.

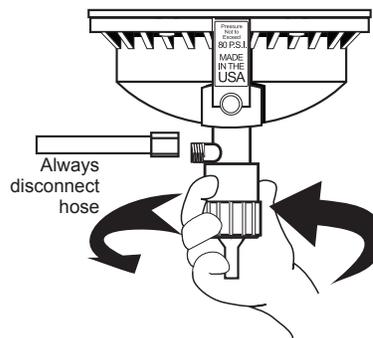

2. Turn pump counter clockwise 1/4 turn, then pull down.


NOTE: always disconnect hose from pump before removing.

Troubleshooting the Fixed Chemical Pump

Problem	Cause	Solution
Motor clicks, but chemical is not drawn up into the suction hose.	Large gasket on lower seal is worn or damaged.	Replace stem assembly with a rebuild kit.
	Sleeve may be broken or extremely worn.	Replace sleeve.
	Pump cap is loose.	Hydro Systems ships all units and pumps with the pump caps loose. At installation caps need to be tightened to a minimum of 20 inch pounds of torque (hand-tighten only).
	Pump stem is not engaged into the piston clip in water motor.	Remove pump, check for a broken or worn pump stem at tip. Pump stem must be pulled out completely (approx. 2 in.) before being inserted into the bottom of the water motor.
Chemical solution is drawn up in the suction hose, but then falls back down.	Piston clip may be broken or worn on the inside of the water motor.	This is an extremely rare occurrence but if the pump stem was not pulled out when initially installed this could cause excessive wear of the piston clip. The water motor must be sent to an authorized repair center or Hydro Systems for repair.*
	Vacuum leak.	Check valve may need cleaning or replacing. Tighten pump cap to recommended 20 inch pounds of torque. Check suction hose to insure a tight fit with clamp in place. Prime pump by hand and verify that chemical solution stays up in the suction hose.

Cutaway view of fixed pump

* RGA number must be obtained before unit is returned. Call for further information.

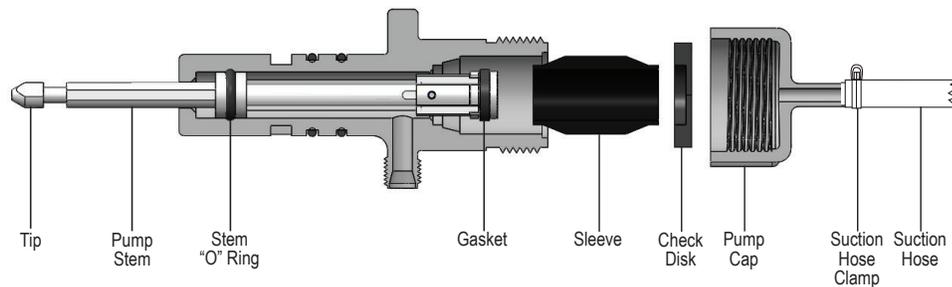

Chemilizer Fixed

Water-Driven,
Diaphragm Pump



Model	Part Number
1-128	CH9000-209
1-100	CH9000-210
1-128	SPV0174
1-100	SPV0175
2-100	CH9000-211

Maintenance Kits

Kit A: Dosage Seal Kits



Model	Gasket	O Ring
1-128	FG9910	OR9910
1-1100	FG9910	OR9910
2-100		OR9912

Kit B: Dosage Sleeves



Model	Ceramic	Kynar
1-128	10095071	10097374
1-1100	10095071	10097374
2-100	10095072	

Kit C: Pump Rebuild Kit



Model	Ceramic	Kynar
1-128	OR9409-V	FG9409-V
1-1100	OR9410-V	FG9410-V
2-100	FG9011	

Kit D: Chemical Pumps



Model	Ceramic	Kynar
1-128	SPV0176	FG9209-V
1-1100	SPV0177	FG9219-V
2-100	FG9211	

Kit E: Pump Stems



Model	Ceramic	Kynar
1-128	OR9009	FG9009
1-1100	OR9010	FG9010
2-100	FG9011	

Kit F: Check disks



Model	Part Number	Percent
1-128 / 1-100	FG15404	1%
2-100	FG15504	2%

Kit G: Cap



Model	Part Number
1%	FG9936-V
2%	FG9937-V

Kit H: Pump Housing & O-rings



Model	Part Number
1% or 2%	10095065


Kit I: Pick-up tube assembly



Model	Part Number
1% or 2%	90092113

*Images for information purposes only. Kits may have slight variations depending on the model

Installing the Adjustable Pump to the Water Motor

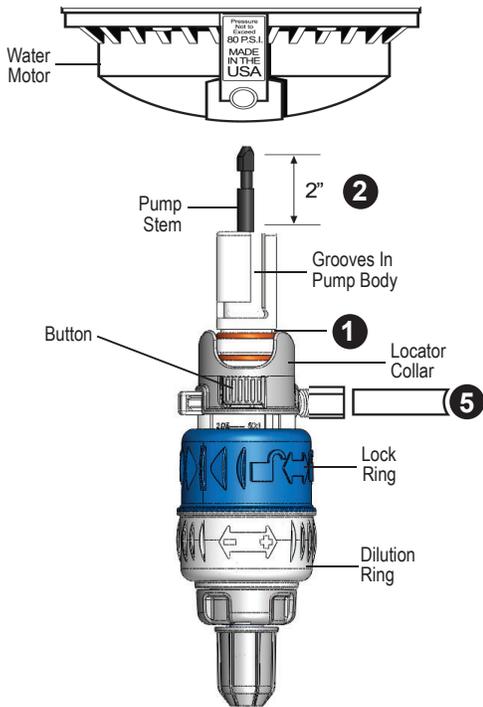

1. Lubricate “O” rings on pump housing with any biodegradable lubricant before pump is installed into motor.

NOTE: a light coating of lubricant is all that is required.


2. **Make sure the pump stem is pulled all the way out (about 2”).**

Remove the white shipping clip prior to installation.

Push the pump up into the water motor, pins inside the water motor will engage with the grooves in the “Pump Body”. Turn pump 1/4 turn clockwise. The slot in the “Locator Collar” will mate with the “Square Projection” on the “Water Motor”.

NOTE: Depressing the “Buttons” on each side of the “Locator Lock” will allow the “Locator Collar” to rotate 180 degrees to allow installation with chemical injection on the right side. If the slot in the “Locator Collar” does not mate with the “Water Motor”, depress the “Buttons” and rotate the “Locator Collar” until the “Groove” mates with the “Water Motor”.

- Rotating the “Dilution Ring” changes the dilution ratio. Rotate the “Dilution Ring” either direction until the correct dilution is set.
- Rotate the “Lock Ring” clockwise to lock the dilution setting. Rotating the “Lock Ring” counter-clockwise allows the dilution to be changed.
- After installing pump into bottom of water motor - loosen Jaco nut on pump and insert hose into fitting. Re-tighten Jaco nut.

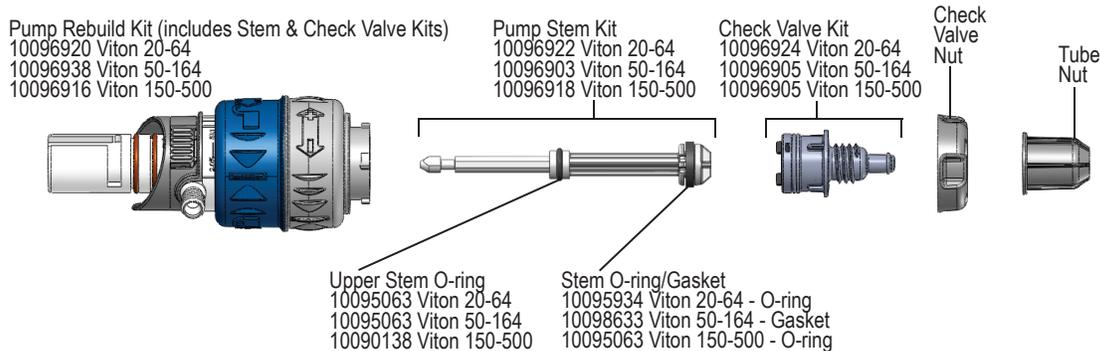

Troubleshooting the Chemical Pump

Problem	Cause	Solution
Motor clicks, but chemical is not drawn up into the suction hose.	Large “O” ring on lower seal is worn or damaged.	Replace pump stem.
	Pump stem is not engaged into the piston clip in water motor.	Remove pump, check for a broken or worn pump stem at tip. Pump stem must be pulled out completely (approx. 2 in.) before being inserted into the bottom of the water motor.
	Piston clip may be broken or worn on the inside of the water motor.	This is an extremely rare occurrence but if the pump stem was not pulled out when initially installed this could cause excessive wear of the piston clip. The water motor must be sent to an authorized repair center or Hydro Systems for repair.*
Chemical solution is drawn up in the suction hose, but then falls back down.	Vacuum leak.	Check valve may need cleaning or replacing.
		Check suction hose to insure a tight fit with tube nut in place.
		Prime pump by hand and verify that chemical solution stays up in the suction hose.


TROUBLESHOOTING - Chemilizer Injector

Troubleshooting the Water Motor


Note: When the water motor is working properly, you should hear a clicking sound.

Problem	Cause	Solution
Water motor does not click. Water does not flow past unit.	No water flow to motor.	Check that gate valves "B" & "C" are open.
	Incoming water is incorrectly connected to outlet side of water motor.	Verify that incoming water is connected to the inlet (right side) of the water motor.
Water motor does not click. Water does flow past unit.	Water-motor is in "bypass" due to damaged parts on the inside of water motor or excessive wear of moving parts.	Send unit to a service center or to Hydro Systems for repair.*
	Gate valve "A" is not fully closed or may be leaking due to wear from sand or debris.	Check that gate valve "A" is fully closed and not leaking by closing valve "B" and removing hose from "C", open valve "C", water should not come out of valve "C" if valve "A" is working properly.
Motor clicks a few times, then stops.	Unit is in bypass condition.	Shut off water flow. Relieve pressure by loosening air vent. Restart water flow.
	Motor may be in bypass due to worn or broken parts.	Send unit to a service center or to Hydro Systems for repair.*
	Gasket or "O" ring on pump stem may have excessive wear, allowing water to seep past at low flows stopping motor.	Change out pump with a known good pump. If unit continues to work, rebuild old pump with pump rebuild kit.
	Clogged chemical feed tube.	Inspect chemical feed tube for blockage and clean or replace tube.
Motor works on high flow (over 5 gpm) but stops on low flows (under 2 gpm).	Gate valve "A" may be leaking.	See above.
	Gasket or "O" ring on pump stem may have excessive wear.	See above.

* RGA number must be obtained before unit is returned. Call for further information.

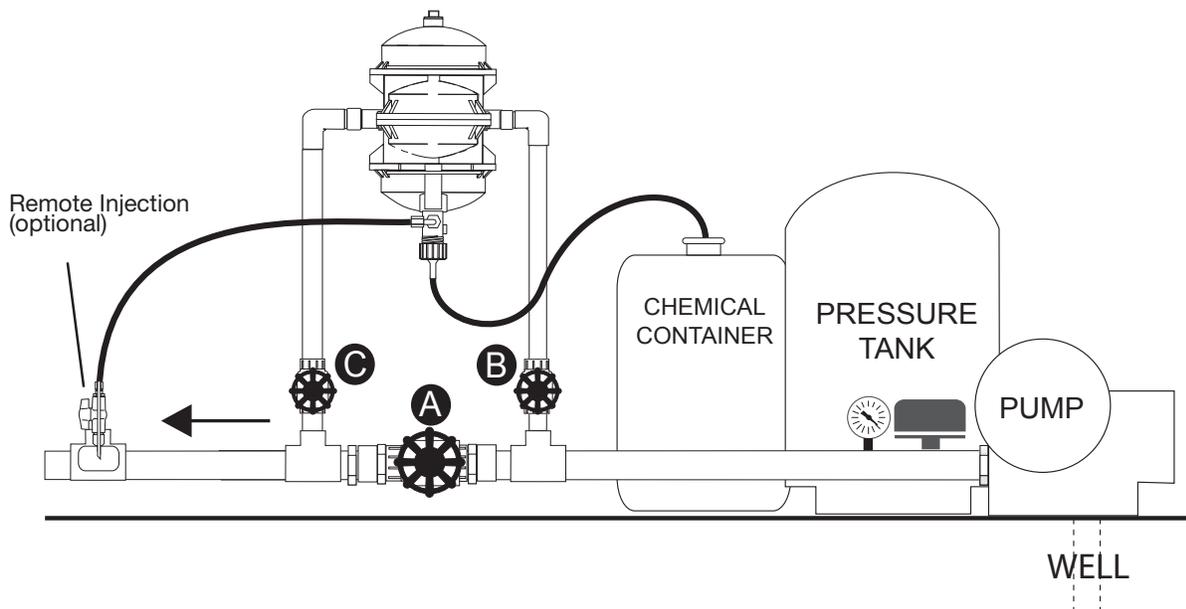

Water Motor Parts

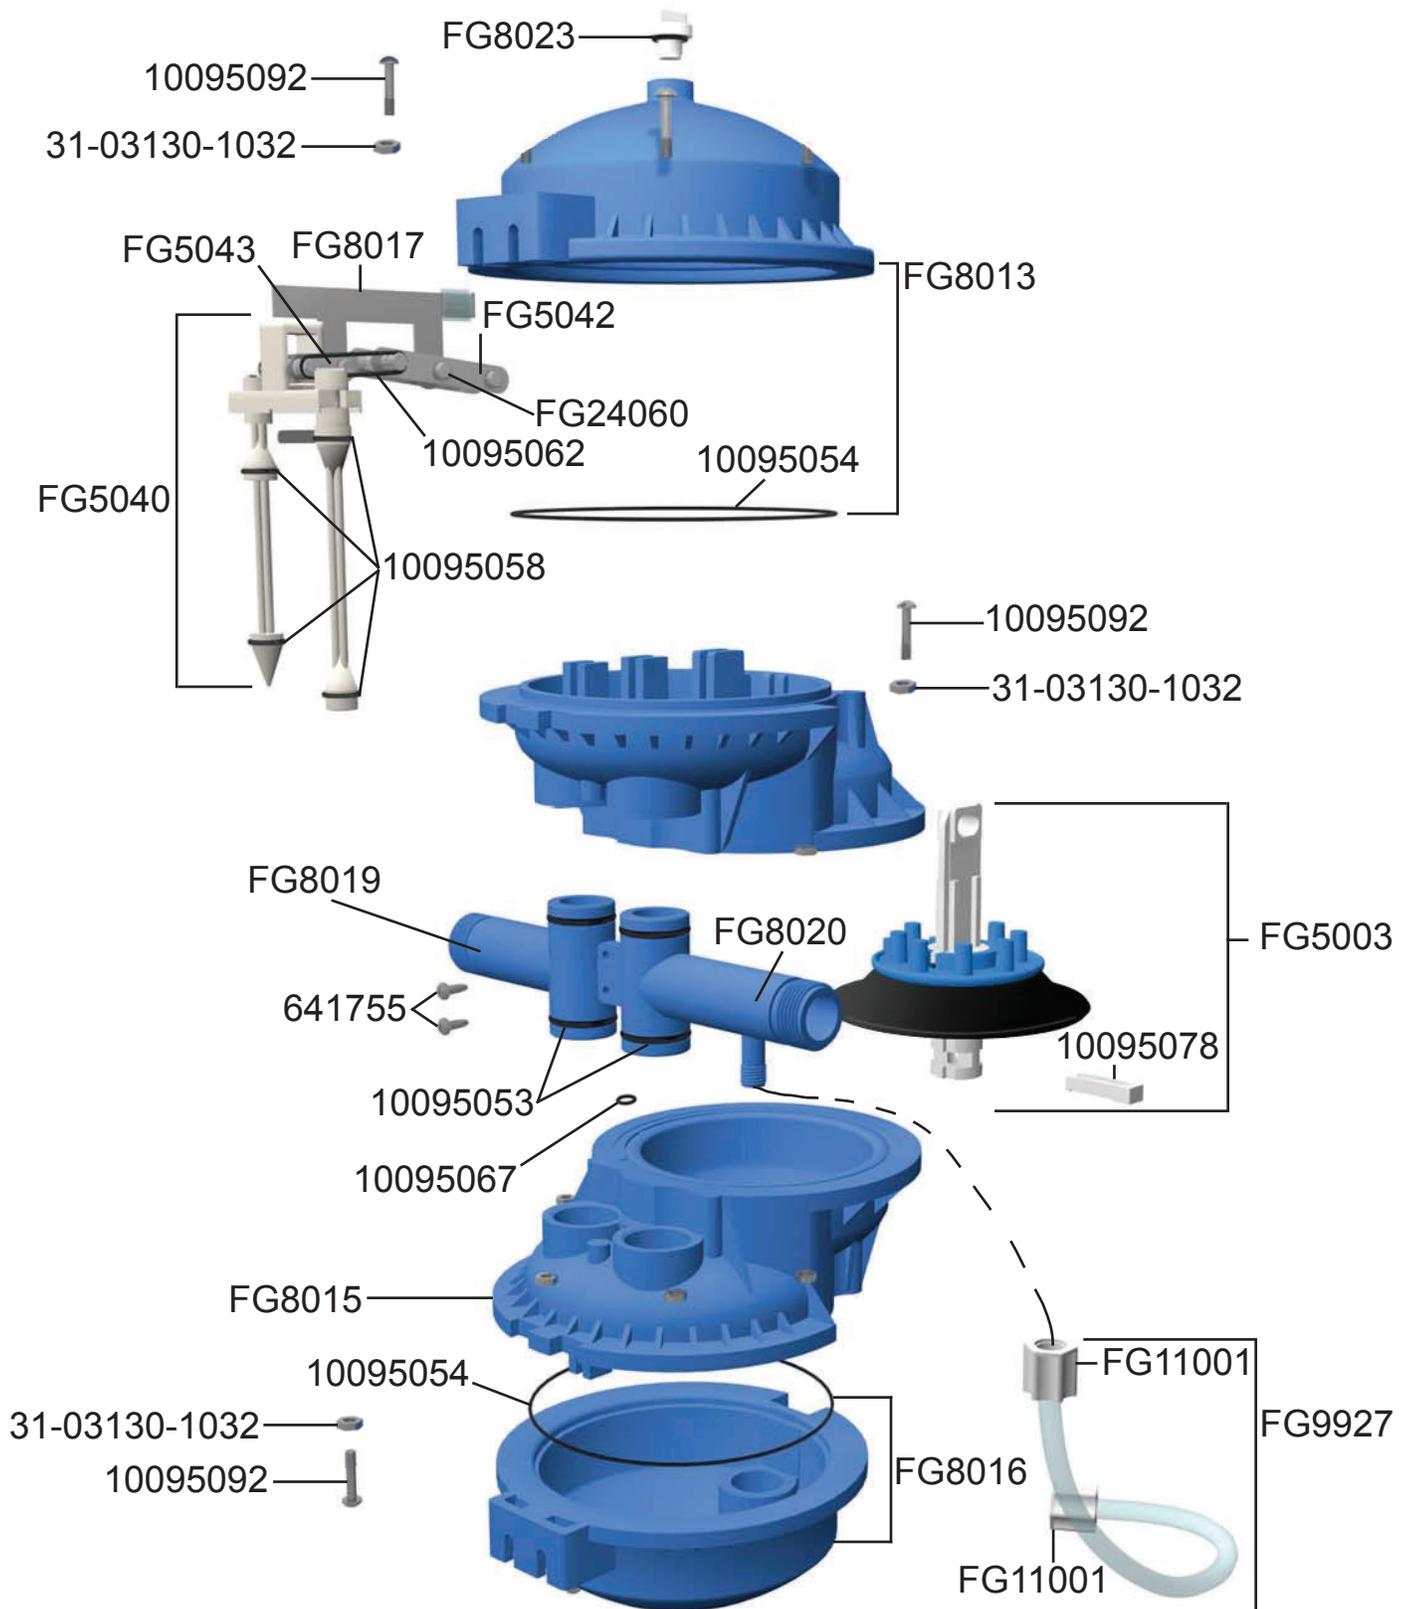

United States Warranty Policy*

Water Motor Limited Warranty. The water motor is warranted to be free from defects in materials and workmanship for a period of two years from the date of purchase. During the first six-month period, should the water motor fail, it will be replaced with a new water motor. For the balance of the warranty period, should the water motor fail, it will be rebuilt or replaced, at the option of Hydro Systems, and warranted for the balance of the original warranty period. This warranty does not cover damage due to misuse, abuse, neglect, or alteration. This warranty does not cover any labor or shipping charges for removal and reinstallation. This warranty is void if the serial number label is removed from the unit. This warranty is non-transferable.

Chemical Pump. *The Chemical Pump is not covered under warranty.* Hydro Systems Company has no control over the types of materials or chemicals that will be used in this equipment, therefore we can not guarantee the chemical pump to be impervious to each and every chemical. Wear of seals and other components is normal and will vary depending on operating conditions and the chemicals being used. Wear to the pump and components, due to use or chemical attack, are not covered by warranty.

Miscellaneous Products. Hydro does not warrant parts manufactured by outside sources which are used in the assembly of other product offered by Hydro Systems. This includes parts used in installation kits such as gate valves and PVC components.

Warranty Claims. Return to your local dealer, or to Hydro Systems Company. Proof of purchase date, serial number, and an explanation of the complaint must accompany the merchandise along with an Returned Goods Authorization (RGA) Number. In the event proof of purchase is not available, manufacture date on the unit will be used to determine warranty period. Final determination of all warranty claims will be made by manufacturer.

Before sending merchandise to Hydro Systems Company, call for a return authorization number. **1-800-543-7184.**

* This warranty policy applies only to units and component parts purchased and installed in the United States.

For the latest updates or modifications, please check our website at: **www.hydrosystemsco.com**



World Headquarters

Hydro Systems Company

3798 Round Bottom Road
Cincinnati, OH 45244
U.S.A.
T 513-271-8800
F 513-271-0160
Toll Free: 1-800-543-7184
www.hydrosystemsco.com

European Offices

Hydro Systems Europe

Unit 3, The Sterling Centre
Eastern Road
Bracknell, Berkshire
RG12 2PW
England
T +44 (0)1344 488880
F +44 (0)1344 488879

Asia Pacific Offices

Hydro Systems Australia

Unit A, 1 Kelham Place
Glendenning
NSW 2761
Australia
T +612-9625-8122
F +612-9625-8177

South America Office

Hydro Systems South America

Av. Prefeito Luis Latorre, 9.401, 172
Distrito Industrial
Jundiaí SP
CEP: 13209-430
Brasil
T +55 (12) 3201-7707
www.hydrosystems.com.br

Hydro Systems Bordeaux France

13 bis avenue Descartes
C33370 Artigues-pres-Bordeaux
France
T +33 (0)557 97 13 13
F +33 (0)577 97 10 19
www.hydrosystemeurope.com

Hydro Systems Asia Pacific

Unit 01, 18th Floor,
Lujiazui Fund Tower,
1528 Century Avenue,
Pudong New Area
Shanghai, 200122 P.R. China
T +86 21 400-600-4026
www.hydrosystemschina.com

Dover Southeast Asia

(Thailand) 762/2, A Building
Room A540,
Rama 3 Road,
Bang Pong Pang,
Yannawa, 10120, Thailand
T +66 2 295 2788
F +66 2 295 2785
www.hydrosystemschina.com